



# ADVENTURE PLAY TENT

## Instructions

AGES  
3+

### CONTENTS

1. ADVENTURE DOME TENT



2. ADVENTURE TUNNEL TUBE




3. (2) TENT SUPPORT POLES




### ASSEMBLY

Note: Setup requires adult supervision.

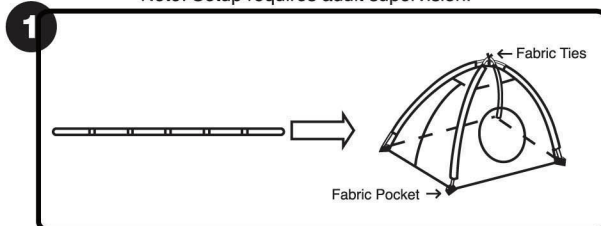


**(1) Connect Rods** – Assemble the tent support poles by inserting each rod section into each connector. When you are finished you will have 2 long rods.  
**(2) Insert Tent Poles and Setup Tent** - Insert each of the 2 Tent Support Poles into the fabric loops along the seams of the tent until they appear at the other end. Secure each of the four support pole ends into the black fabric pockets at the base of the tent. The tents should now be standing and stable. Tie the fabric ties to at the top of the tent to the support poles where they cross.

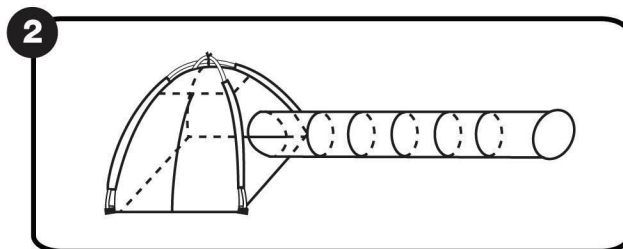

**Open the Passage and Attach the Tunnel**- Roll up the fabric flap covering the circular opening and secure it with the fabric tie. Carefully untie the fabric ties around the perimeter of the tunnel and it will spring to its full length. Take care in performing this step as the tunnel will open quickly. You can then insert the tunnel into the circular opening of the tent.

### GETTING STARTED

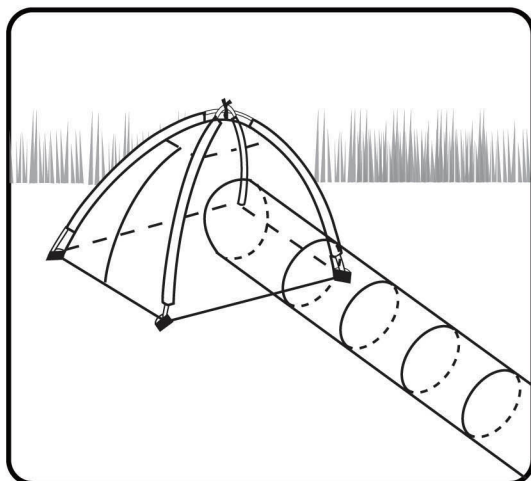

- 1 Ensure there is enough space for tent setup. Place indoors or outdoors.
- 2 Be creative and enjoy your new play tent.

#### SAFETY WARNINGS - PLEASE READ BEFORE USING PRODUCT

- Keep play tent away from open flame
- Clean tent only with a damp cloth
- Never let children fold and/or unfold tent without adult supervision
- A portion of this tent has an internal spring frame that will "pop" open with force
- Only use this tent on level ground, and clear of any stones or sharp objects
- Tent is designed for general child play ONLY
- Tent is not waterproof and is NOT intended for camping outdoors
- If interior frame becomes bent or broken, discontinue use and discard immediately